

CTCSS Tone Chart and the binary / Hex code

Frequency in Hertz	D 5, 4, 3, 2, 1, 0 Switch				
	Binary	Hex	in Hertz	Binary	Hex
67.0	11 1111	FF	*171.3	n/a	
69.3	11 1001	F9	173.8	00 0101	0A
71.9	01 1111	8F	*177.3	n/a	
74.4	11 1110	F7	179.9	01 0100	82
77.0	00 1111	0F	*183.5	11 0010	F4
79.7	11 1101	FB	186.2	00 0100	02
82.5	01 1110	87	*189.9	11 0011	FC
85.4	11 1199	F3	192.8	01 0011	8C
88.5	00 1110	07	*196.6	11 0100	F2
91.5	11 1011	FD	*199.5	11 0101	FA
94.8	01 1101	8B	203.5	00 0011	0C
97.4	11 1010	F5	*206.5	11 0110	F6
100.0	00 1101	0B	210.7	01 0010	84
103.5	01 1100	83	218.1	00 0010	04
107.3	00 1100	03	225.7	01 0001	88
110.9	01 1011	8D	*229.1	11 0111	FE
114.8	01 1011	0D	233.6	00 0001	08
118.8	01 1010	85	241.8	01 0000	80
123.0	00 1010	05	250.3	00 0000	00
127.3	01 1001	89	*254.1	11 1000	F1
131.8	00 1001	09	No Tone	11 0000	F0
136.5	01 1000	81			
141.3	00 1000	01	* Denotes Not Standard		
146.2	01 0111	8E			
151.4	00 0111	0E			
156.7	01 0110	86			
*159.8	11 0001	F8			
162.2	00 0110	06			
167.9	01 0101	8A			